100ARG20 TIMBER FLOOR/DECK

For 100AR20, 100PS20, 100TR20, 100MND20.

When 100G20 is running parrallel to joist/bearer





When 100G20 is running perpendicular to joist/bearer

